



Ceiling Star SM Installation Instructions




IMPORTANT PLEASE READ BEFORE INSTALLATION

- Before commencing installation ensure the relevant mains supply has been safely isolated.
- Installation should be carried out in accordance with the latest relevant wiring regulations for the specific country/region.
- Installation should be carried out by a qualified electrician.
- Ensure all electrical connections are tight with no loose strands, including factory made connections.

WARNINGS


- Use only with the approved driver for this product.
- This luminaire is for indoor use only.
- **IMPORTANT** The LED driver must not be covered by ceiling insulation material; this will reduce the units operational lifetime, invalidate the guarantee and may cause a risk of fire.

This install manual covers the following products:

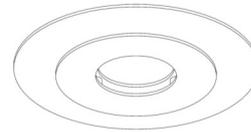

CS-SM-MW/xxx-
xxx-xx-xx/xx


1.

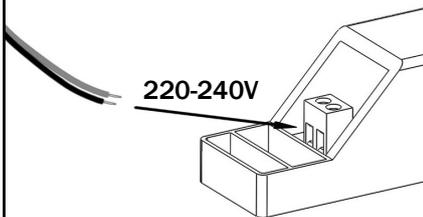

220-240V

Ensure mains is isolated

2.

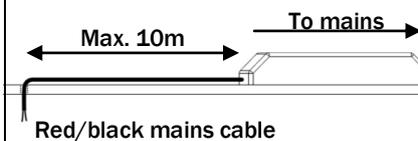


Max. 10m


To mains

Red/black mains cable

3.

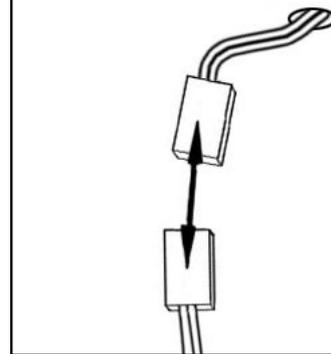

4.

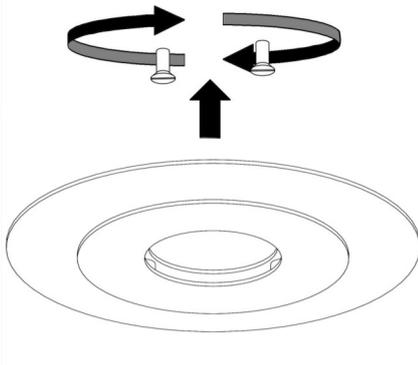

For screwing directly to ceiling:







- Connect LED driver to mains.
- Locate LED driver up to 10m away from fitting and feed connector through ceiling.
- Connect luminaire to LED driver
- Locate appropriate fixing screws at 85mm centres. Do not tighten fully, however there should be sufficient friction between the screw heads and the keyhole slots to hold the fixture in position.
- Use a clockwise twist to secure the luminaire to the screws.
- Tighten screws if necessary.

Photonstar LED Ltd.
Unit 8, Westlink,
Belbins Business Park
Romsey
Hampshire
SO51 7JF
UK

Tel: +44(0) 2381 230 381
Email: info@photonstarled.com
Web: www.photonstarlighting.com



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE

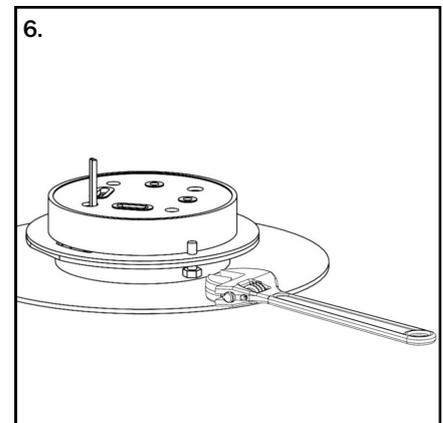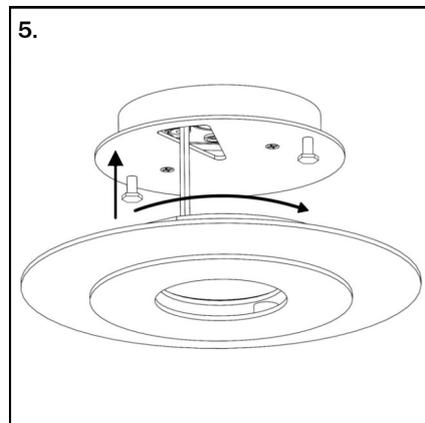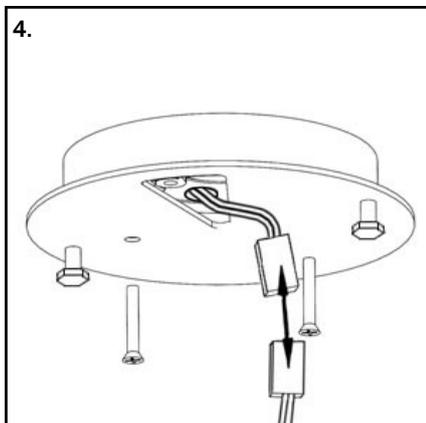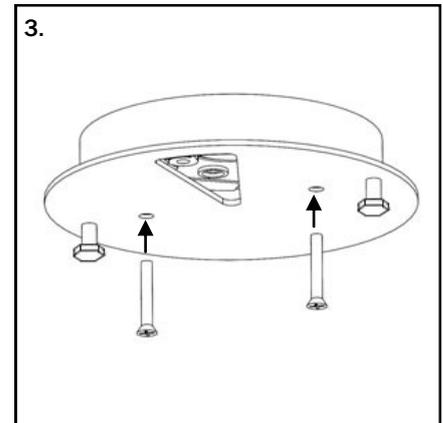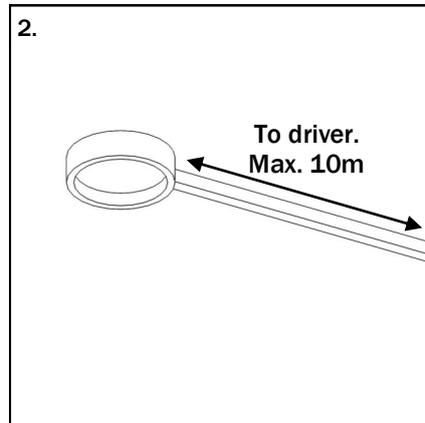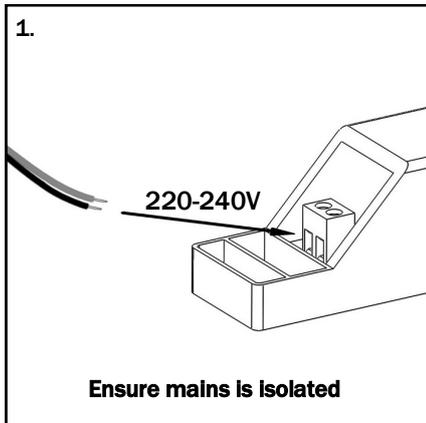

For conduit (BESA) box with 2"/50.8mm centres:

- Connect driver to mains.
- House LED driver up to 10m away from fitting and feed wire through conduit to conduit box.
- Attach a PhotonStar conduit box adaptor plate to the conduit box using two M2.5 screws.
- Connect the luminaire to the LED driver
- Secure the luminaire to the adaptor plate using the two protruding screws and twist clockwise to lock into place.
- Tighten if necessary.

Photonstar LED Ltd.
Unit 8, Westlink,
Belbins Business Park
Romsey
Hampshire
SO51 7JF
UK

Tel: 0845 519 7717
Email: info@photonstarled.com
Web: www.photonstarlighting.com



P2 of 2
Revision: 1.12/04/11